



Installation Template  
for E223 (L)  
Euro Store Front Lock

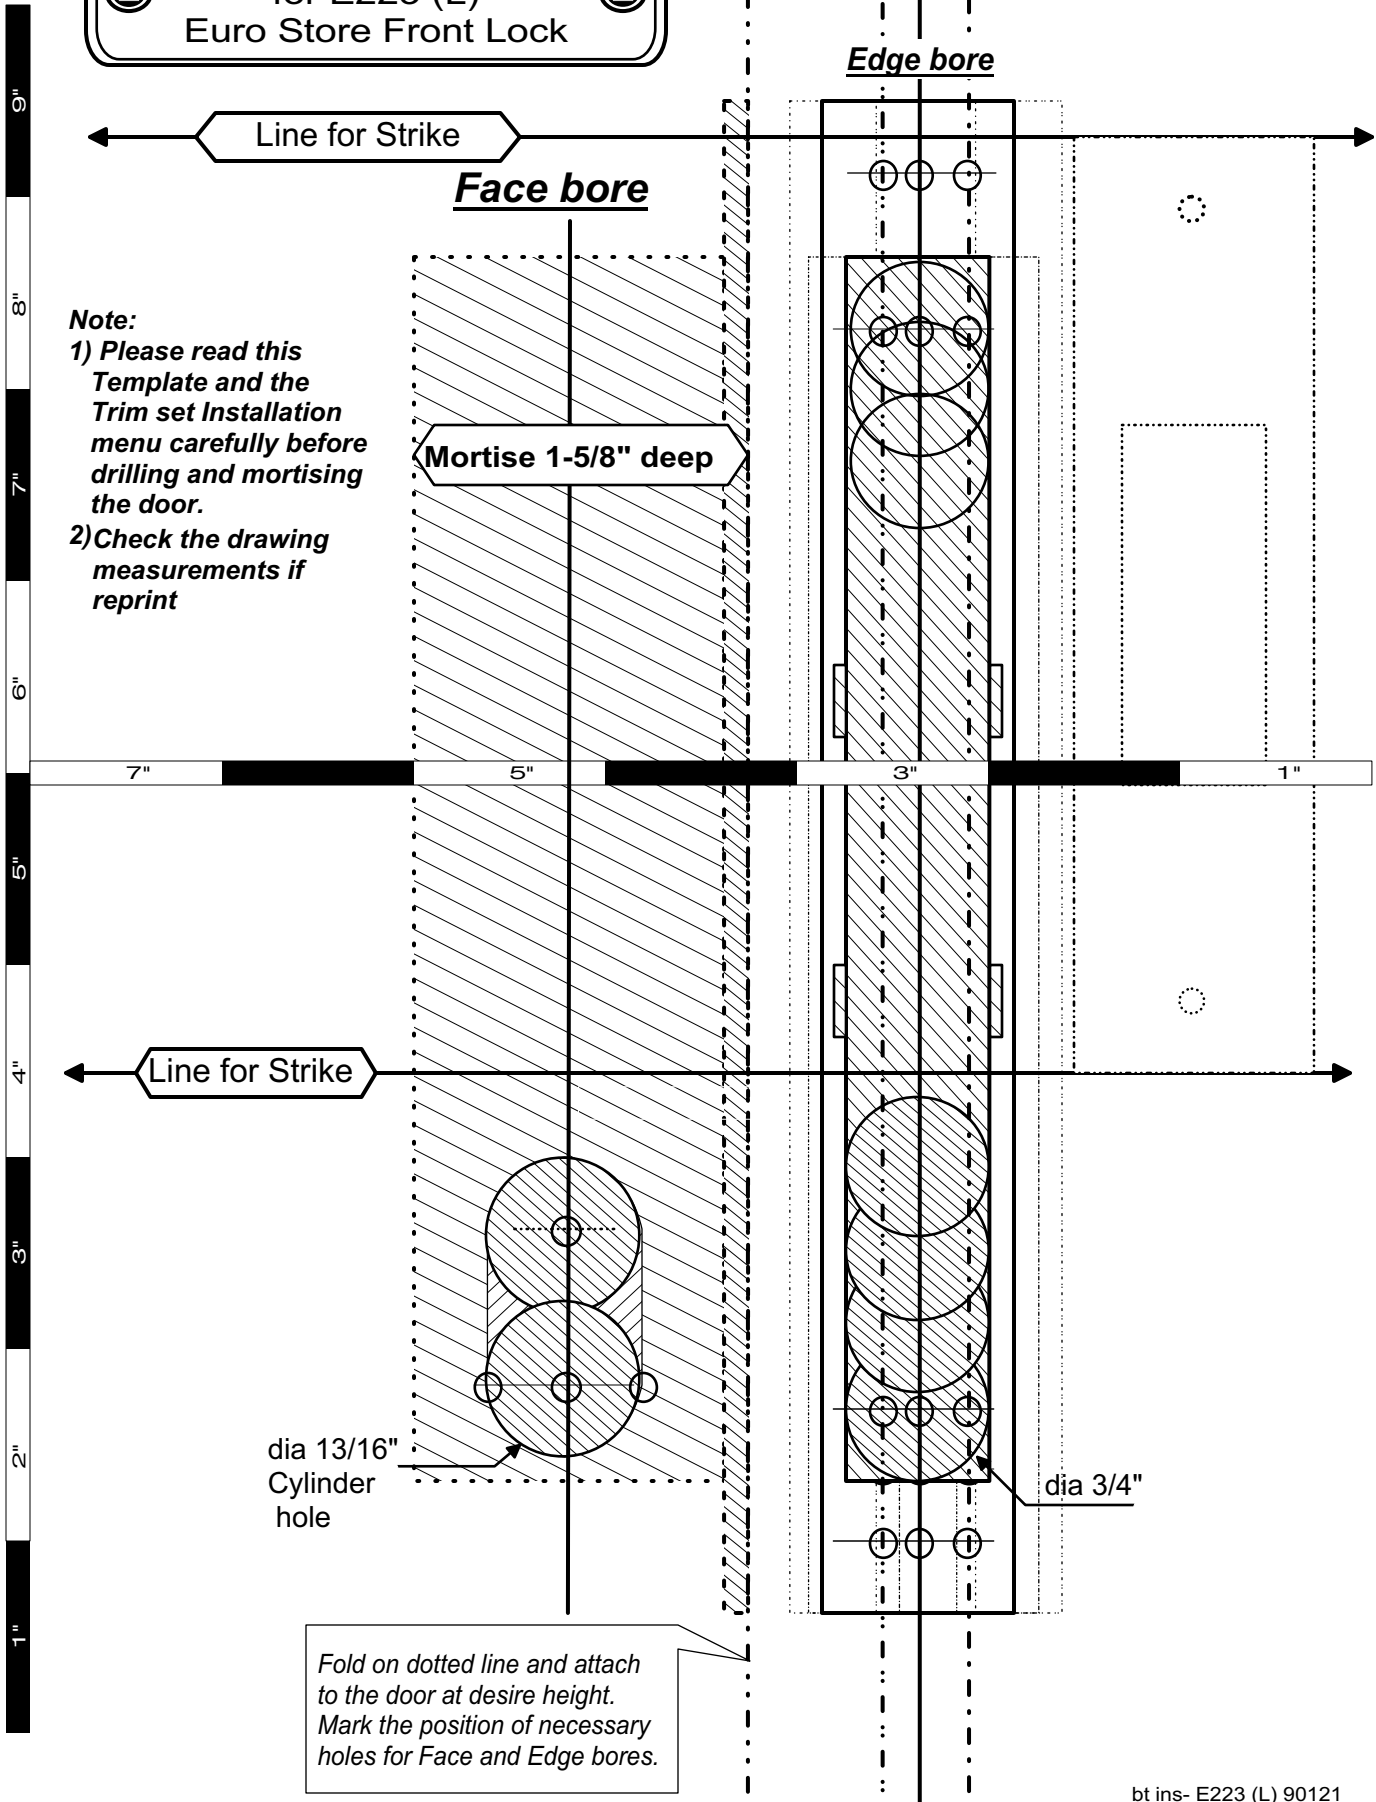

**Note:**  
1) Please read this Template and the Trim set Installation menu carefully before drilling and mortising the door.  
2) Check the drawing measurements if reprint

Fold on dotted line and attach to the door at desire height. Mark the position of necessary holes for Face and Edge bores.

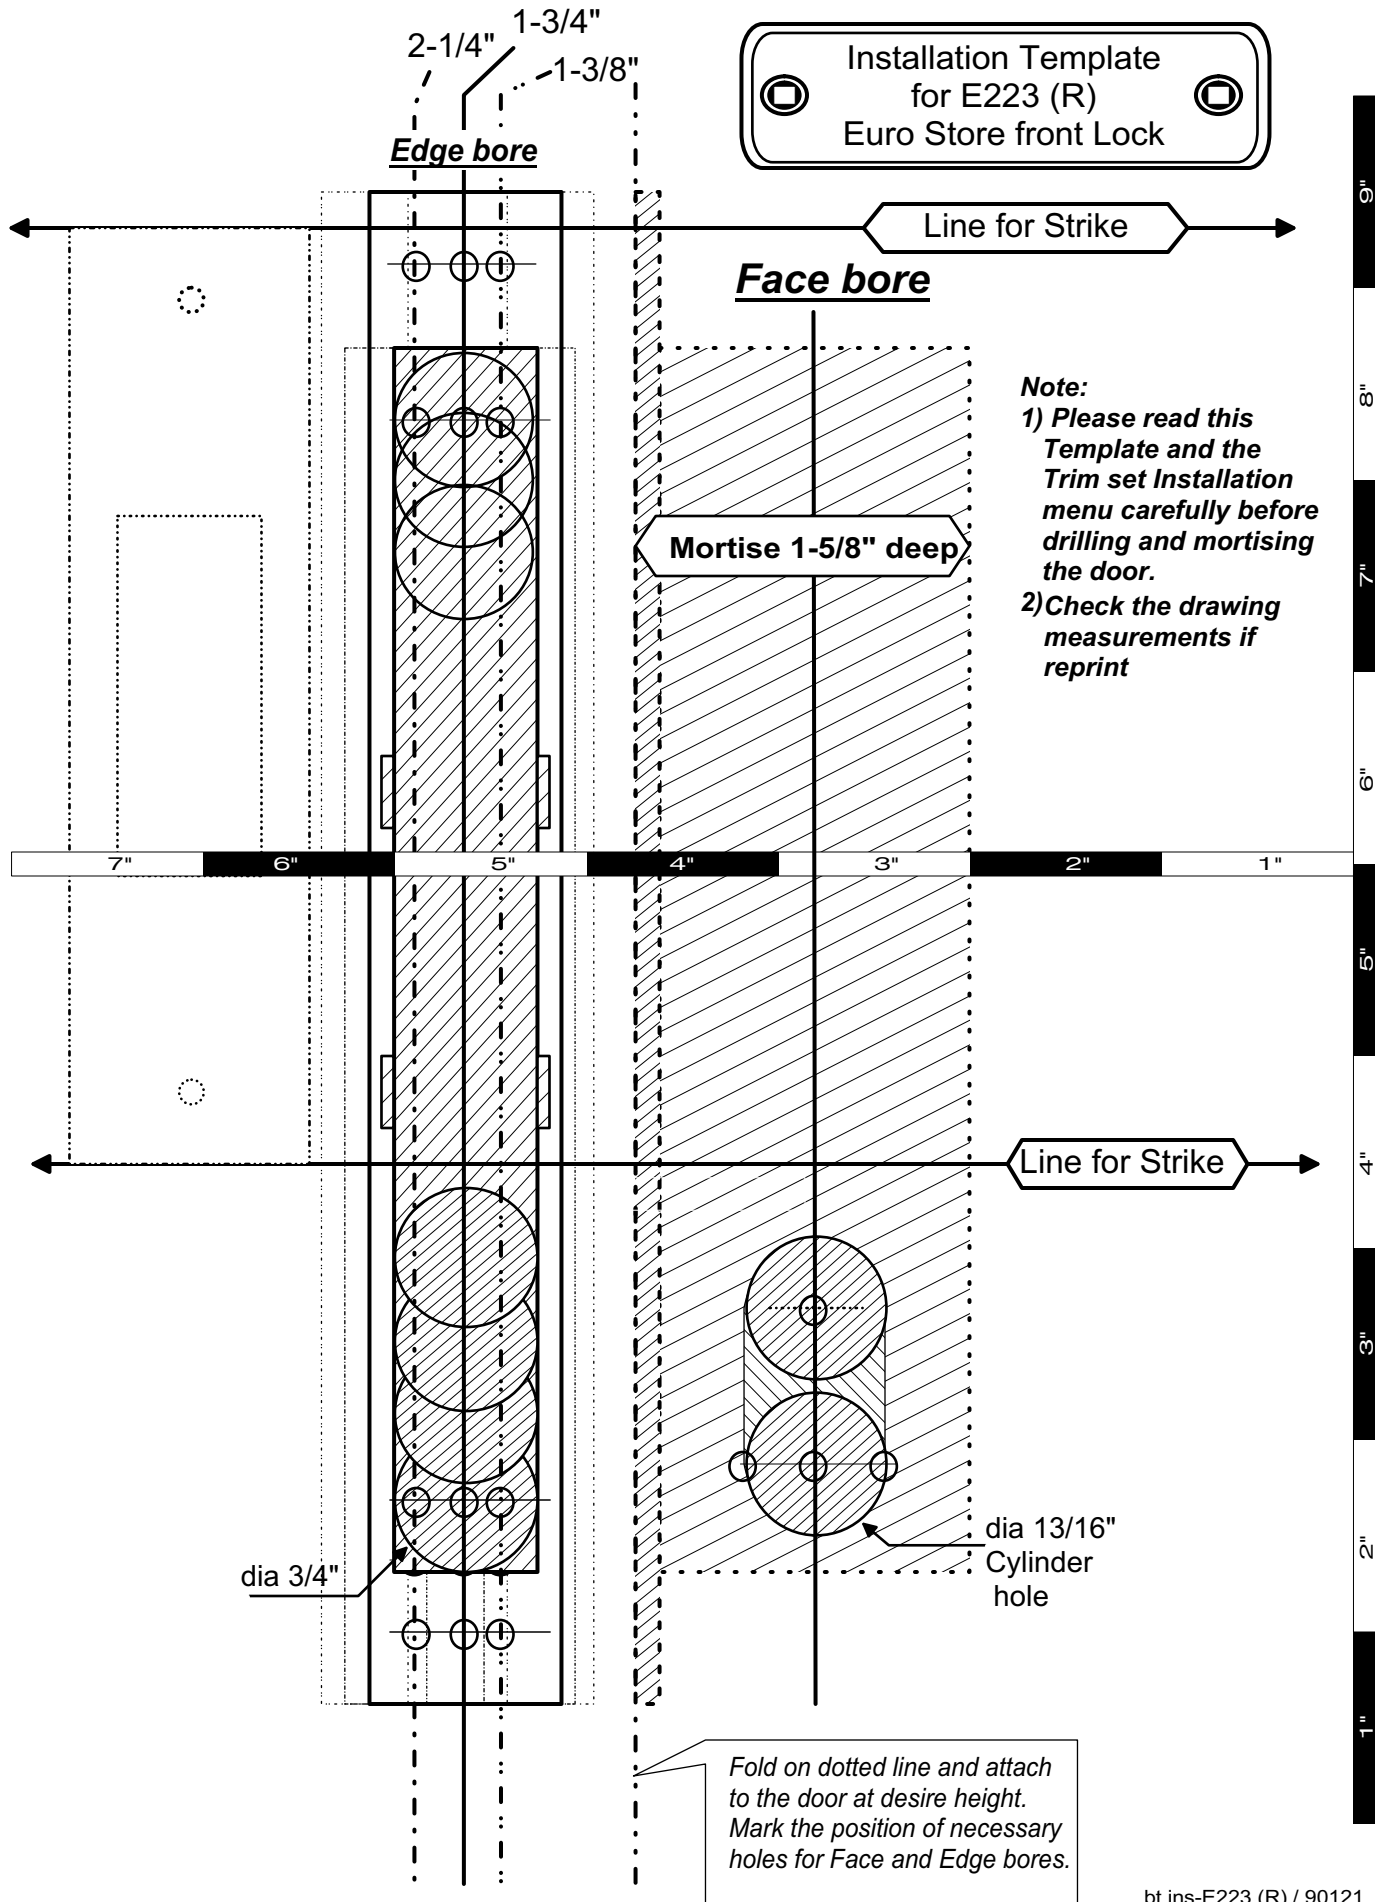

Installation Template  
for E223 (R)  
Euro Store front Lock

**Note:**  
1) Please read this Template and the Trim set Installation menu carefully before drilling and mortising the door.  
2) Check the drawing measurements if reprint

Mortise 1-5/8" deep

Fold on dotted line and attach to the door at desire height. Mark the position of necessary holes for Face and Edge bores.