


**Installation Template for
E600, E700 (85mm C~C)**

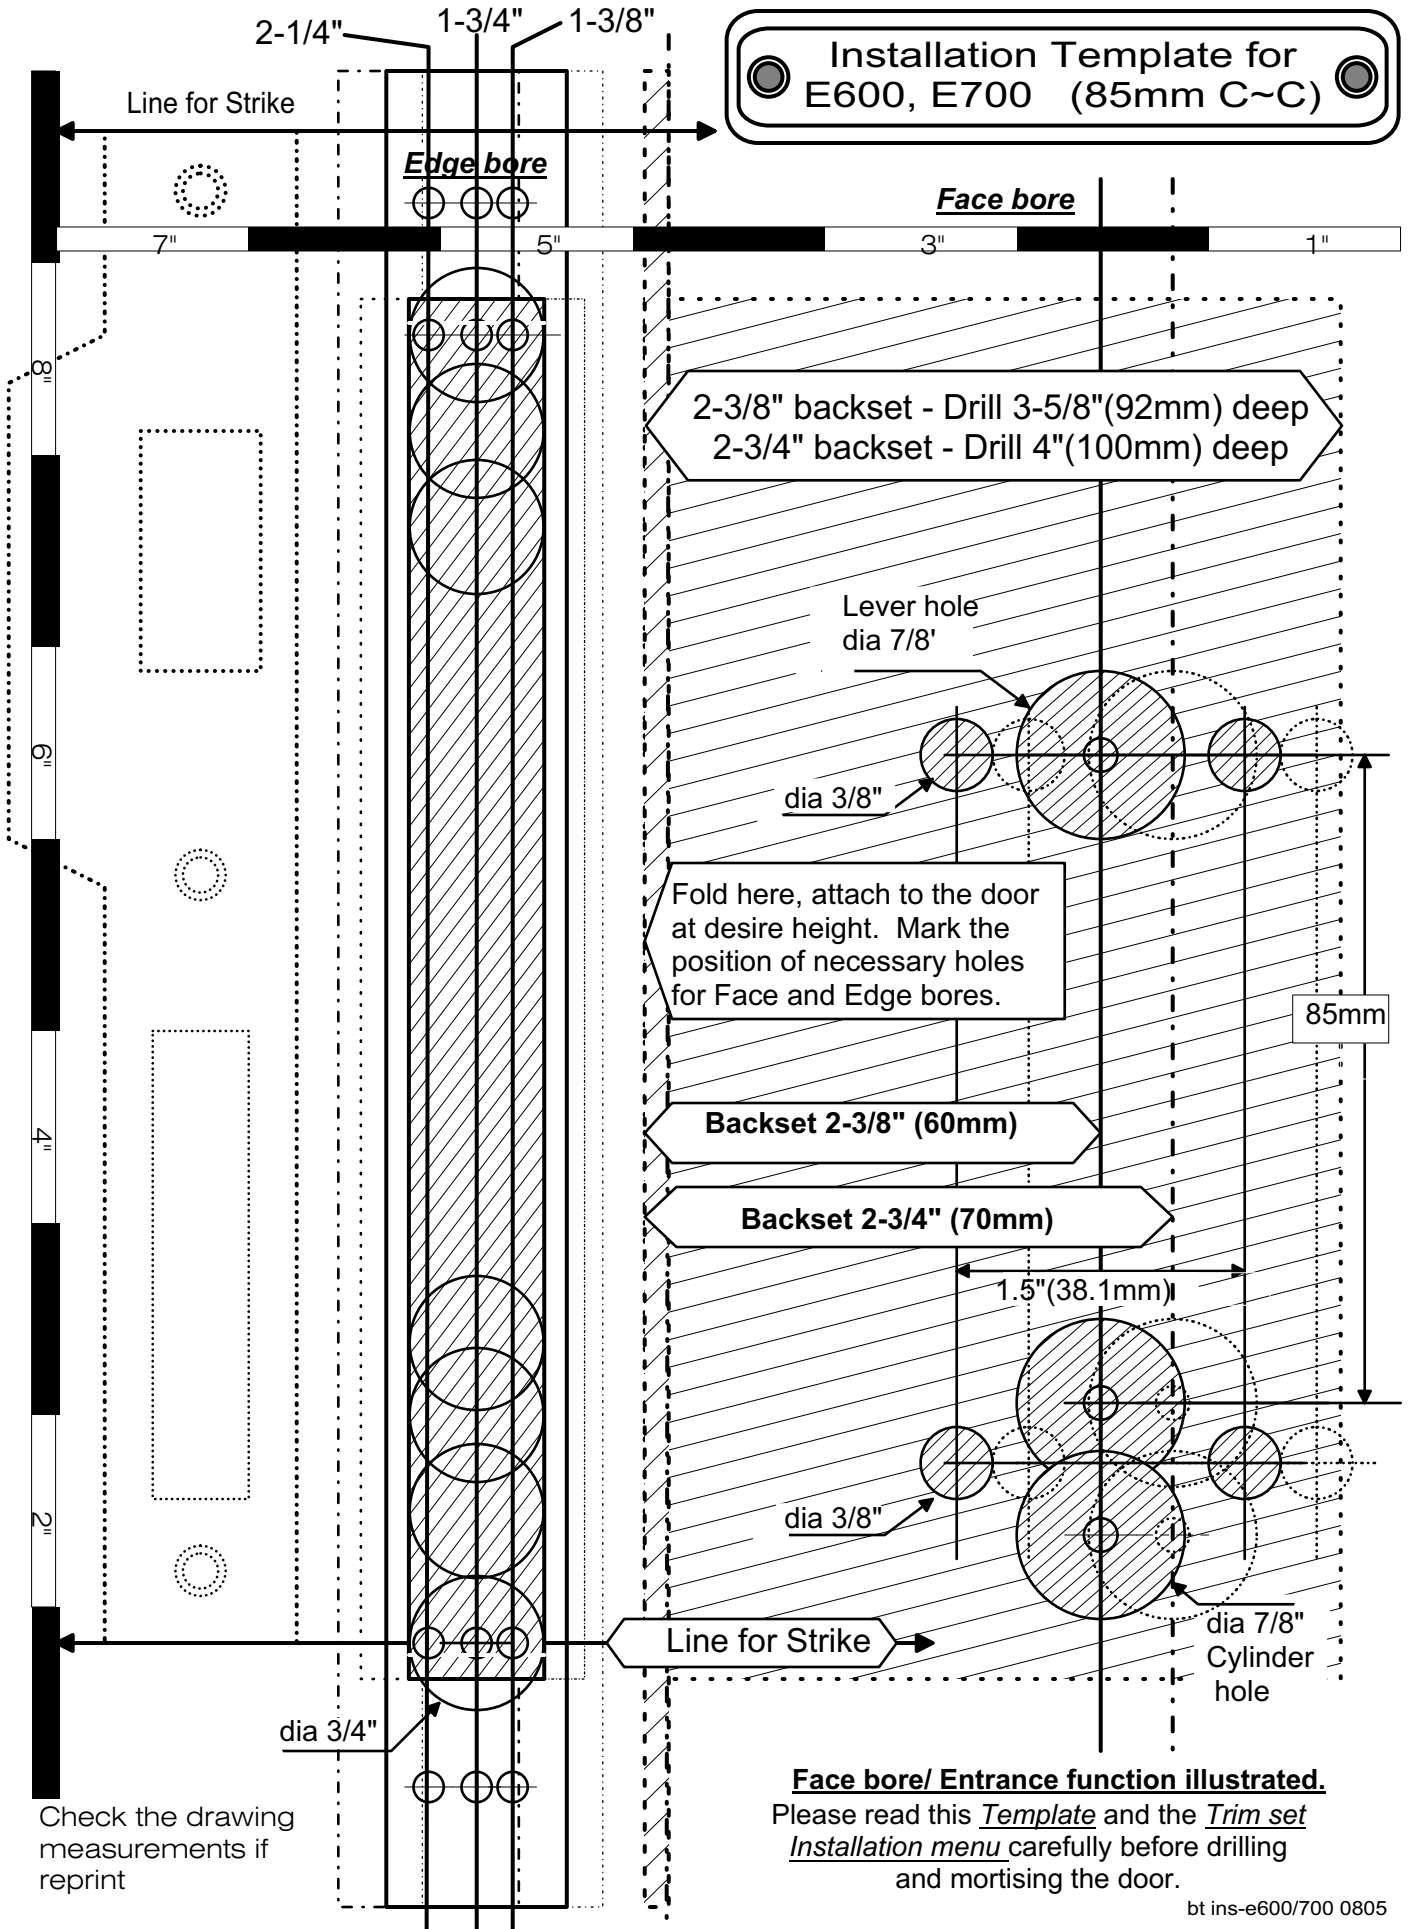

2-3/8" backset - Drill 3-5/8" (92mm) deep
2-3/4" backset - Drill 4" (100mm) deep

Lever hole
dia 7/8"

dia 3/8"

Fold here, attach to the door
at desire height. Mark the
position of necessary holes
for Face and Edge bores.

85mm

Backset 2-3/8" (60mm)

Backset 2-3/4" (70mm)

1.5" (38.1mm)

dia 3/8"

Line for Strike


dia 7/8"
Cylinder
hole

dia 3/4"

Face bore/ Entrance function illustrated.
Please read this *Template* and the *Trim set
Installation menu* carefully before drilling
and mortising the door.

Check the drawing
measurements if
reprint

**Installation Template for
E600, E700 (85mm C~C)**

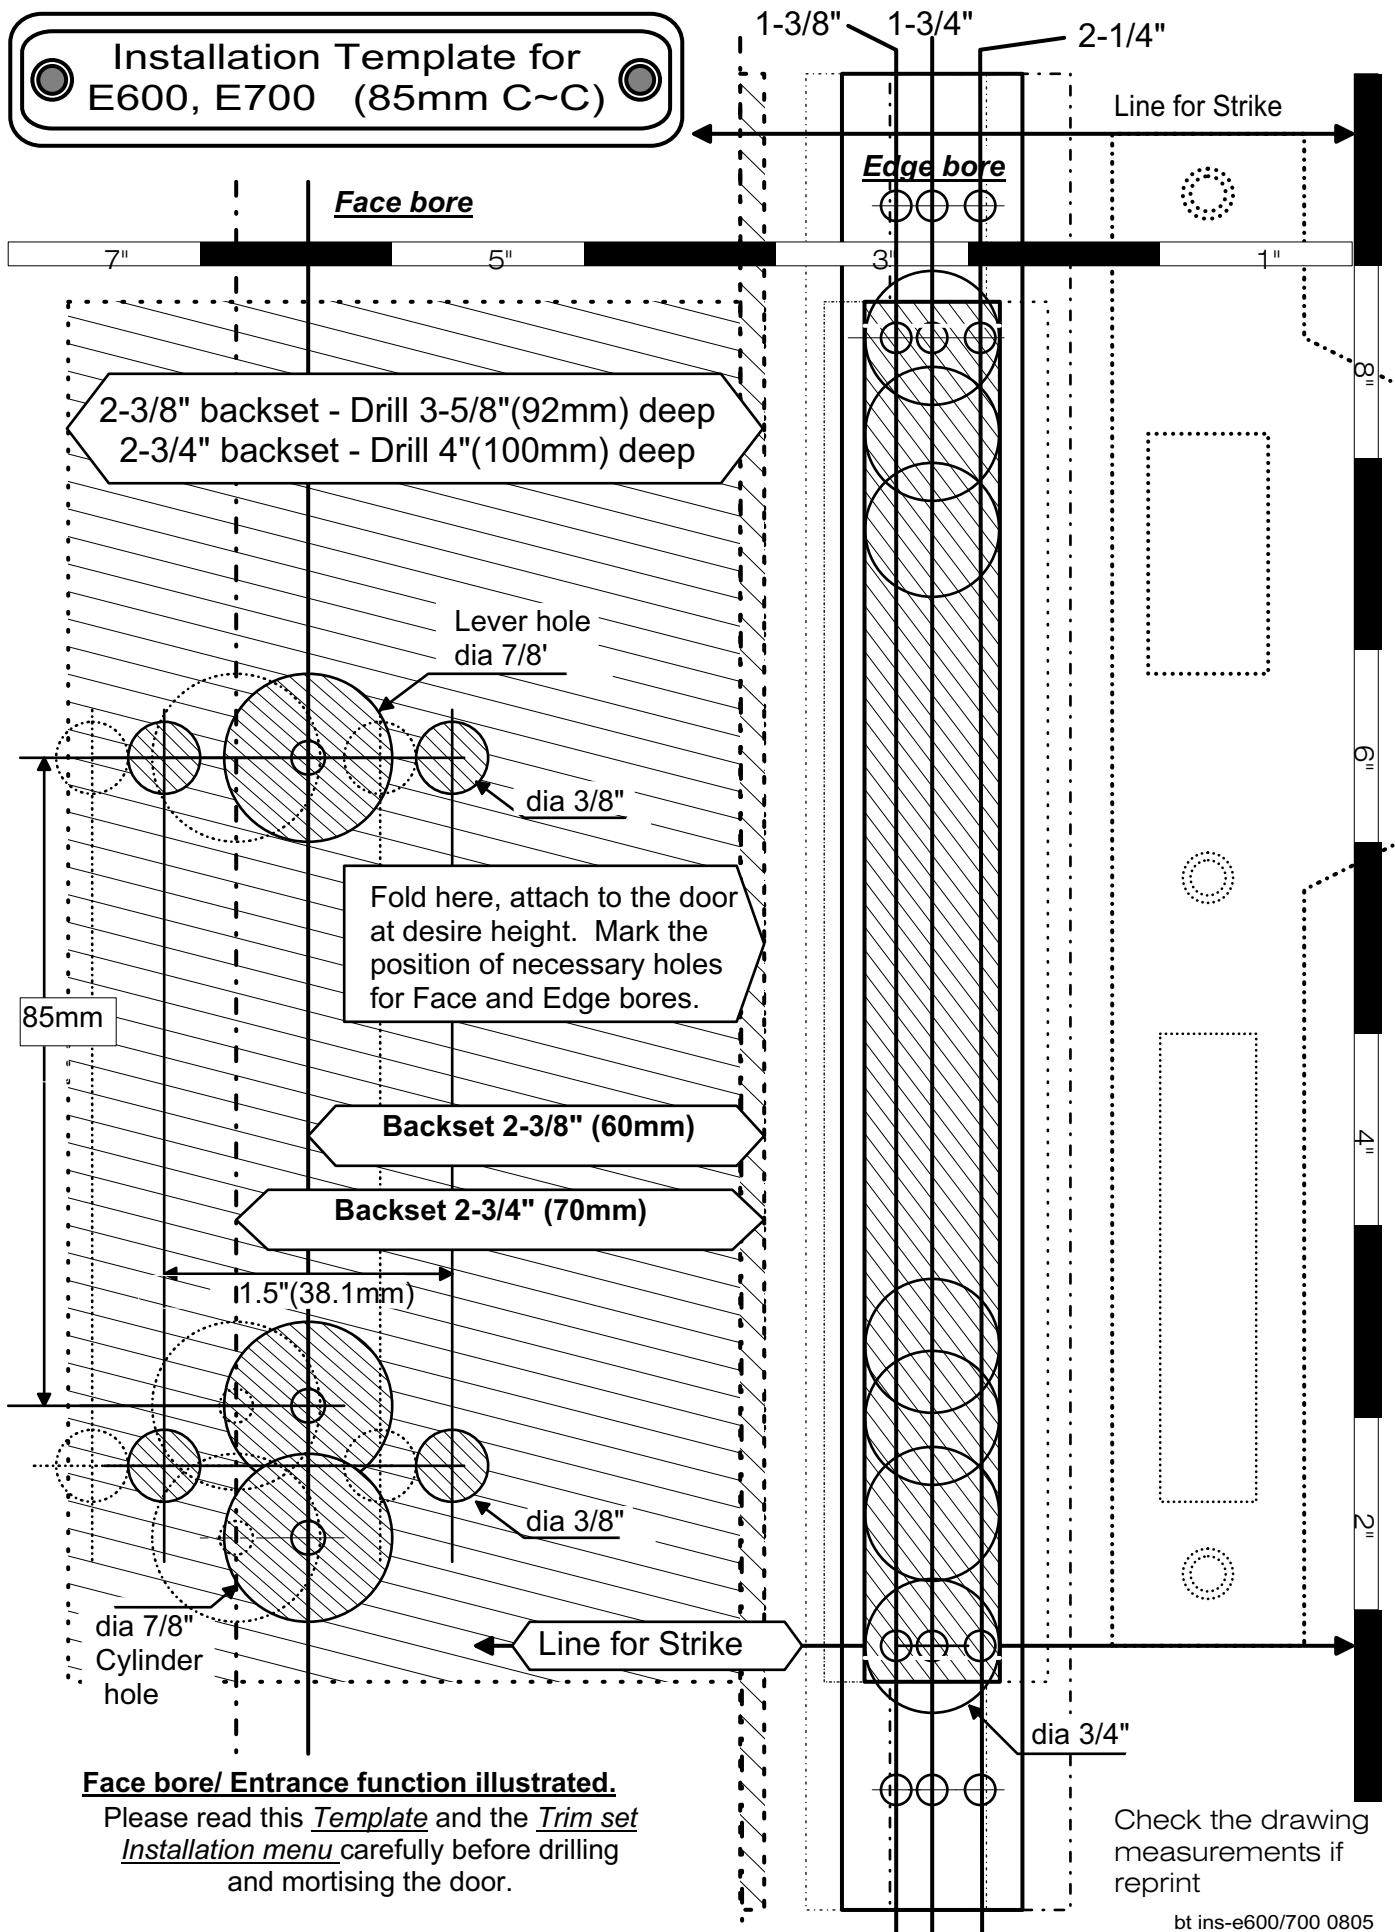

Face bore/ Entrance function illustrated.

Please read this *Template* and the *Trim set Installation menu* carefully before drilling and mortising the door.

Check the drawing measurements if reprint