INSTALLATION INSTRUCTIONS FOR D400 SERIES SINGLE AND DOUBLE CYLINDER DEADLOCKS. (FOR USE ON DOOR 1-3/8" TO 2-1/4" THICK)

1.MARK DOOR




Fold and apply template to high edge of door bevel and mark center of door edge as indicated on template at the desired height




B Mark center hole on door face through guide on template For either 2-3/8", 2-3/4" backset

2.DRILL HOLES



A Bore 1-5/8 " hole from both sides of door (to prevent splintering or otherwise damaging door).




A Bore 15/16 " or 1" hole in the center of door edge through to the lockset hole

3.INSTALL LATCH




A Insert latch in hold . Keeping it parallel to face of door. Mark outline and remove latch



B Chisel 1/8" deep or until latch face is flush with door edge



C Adjustable deadbolt is preset for 2-3/4" backset. For 2-3/4" backset, rotate and pull to adjust housing.



D Install deadbolt latch in "UP" position into hole as shown on latch insert and tighten screws.


4. INSTALL STRIKE




A Bore 1" hole 1" minimum deep for deadboit

To drill 41mm:


B Mortise 1/16 " deep for strike locating from 1" hole in door insert and tighter screws.




5. INSTALL EXTERIOR MECHANISM

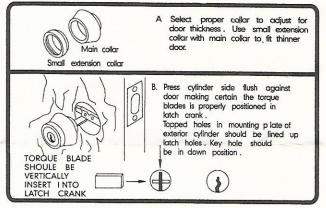

6. INSTALL INTERIOR MECHANISM

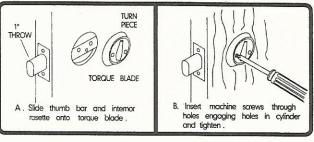

INSTRUCTIONS FOR INSTALLING DOUBLE CYLINDER DEADLOCKS

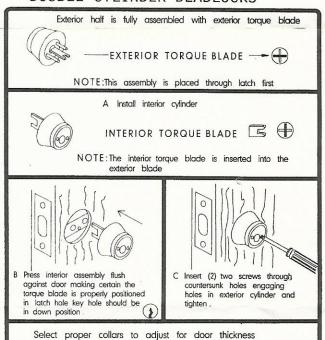

Fold on this heavy line and fit on the door edge

Backset 60mm=2-3/8"

Backset 70mm=2-3/4"

57mm 30mm 44.5mm =2-1/4" =1-3/16 =1-3/4 50.8mm =2" 35mm=1-3/8"